



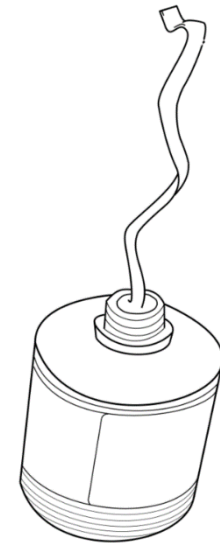

en	Replacing the sensor R32 sensor reference code 7856515
es	Cambio de sonda Código de referencia de la sonda de R32 7856515
fr	Remplacement de la sonde Code de référence de la sonde de R32 7856515
de	Sensor austauschen R32 Sensor Referenzcode 7856515
pl	Wymiana sensora Kod referencyjny sensora R32 7856515
cs	Výměna senzoru Referenční kód senzoru R32 7856515
it	Sostituzione del sensore Codice di riferimento del sensore R32 7856515
nl	De sensor vervangen Referentiecode R32-sensor 7856515
pt	Substituição do sensor Código de referência do sensor R32 7856515
ro	Înlocuirea senzorului Cod de referință senzor R32 7856515
sl	Zamenjava senzorja Referenčna koda senzorja za R32 7856515
el	Αντικατάσταση του αισθητήρα Κωδικός αναφοράς αισθητήρα R32 7856515
hu	Az érzékelő cseréje R32-érezékelő referenciakódja 7856515
da	Skift af sensoren R32 Sensorreferencekode 7856515

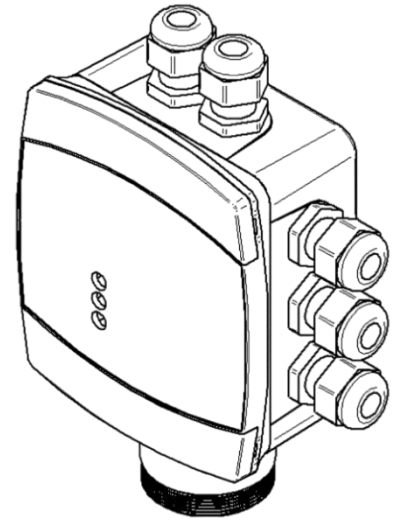

i Important

EN	Frequency: every 5 years
ES	Frecuencia: cada 5 años
FR	Fréquence: tous les 5 ans
DE	Häufigkeit: alle 5 Jahre
PL	Częstotliwość: co 5 lat
CS	Četnost: každých 5 let
IT	Frequenza: ogni 5 anni
NL	Frequentie: elke 5 jaar
PT	Frequência: a cada 5 anos.
RO	Frecvența: la fiecare 5 ani
SL	Pogostost: vsakih 5 let
EL	Συχνότητα: κάθε 5 χρόνια
HU	Gyakoriság: 5 évente
DA	Frekvens: hvert 5. år

EN	Disconnect power prior to the operation
ES	Desconectar la alimentación antes de esta operación.
FR	Déconnecter l'appareil de l'alimentation avant cette opération.
DE	Trennen Sie vor dem Vorgang die Stromversorgung.
PL	Przed rozpoczęciem operacji należy odłączyć zasilanie
CS	Před tímto krokem odpojte napájení.
IT	Prima di procedere, scollegare dall'alimentazione.
NL	Koppel de voeding vóór de procedure los.
PT	Desligue a alimentação antes da operação.
RO	Înainte de operația de înlocuire, deconectați alimentarea
SL	Pred postopkom izključite napajanje.
EL	Αποσυνδέστε από την παροχή ρεύματος πριν από την έναρξη της διαδικασίας.
HU	A művelet előtt válassza le a tápellátásról.
DA	Frakobl strømmen før handlingen

